

Mechanical installation

First step is to build the attachment part.




Next take out the new PR 5335A transmitter



Frame sizes 130 – 280

On frame sizes 130 – 280

installation position is on the side

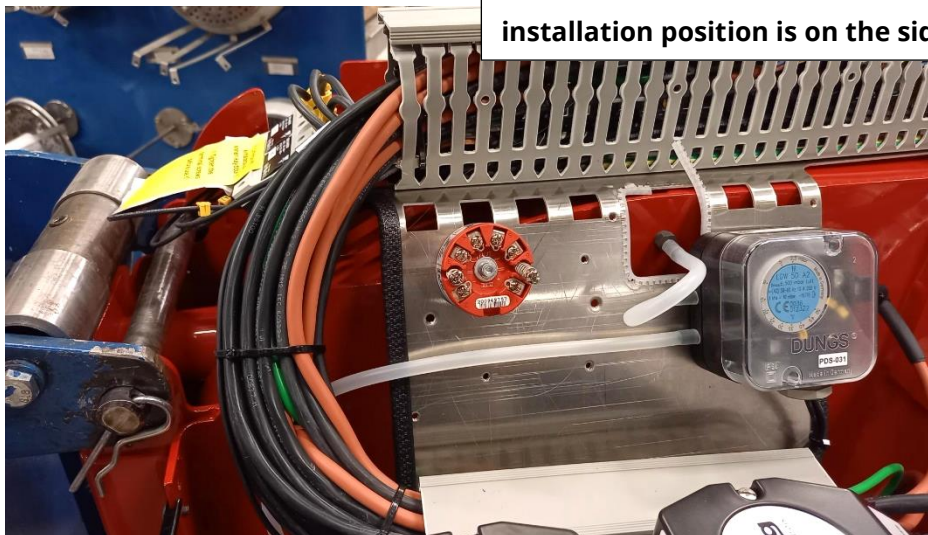

Frame sizes 300 – 700

On frame sizes 300 – 700

installation position is on the end



After the mechanical installation,
perform the electrical connection according
to the attached circuit diagram (EL001652)


Temperature transmitter installation guide

3 (3)

26.7.2022

BURNER CONNECTION PLATE
+KK100

Current

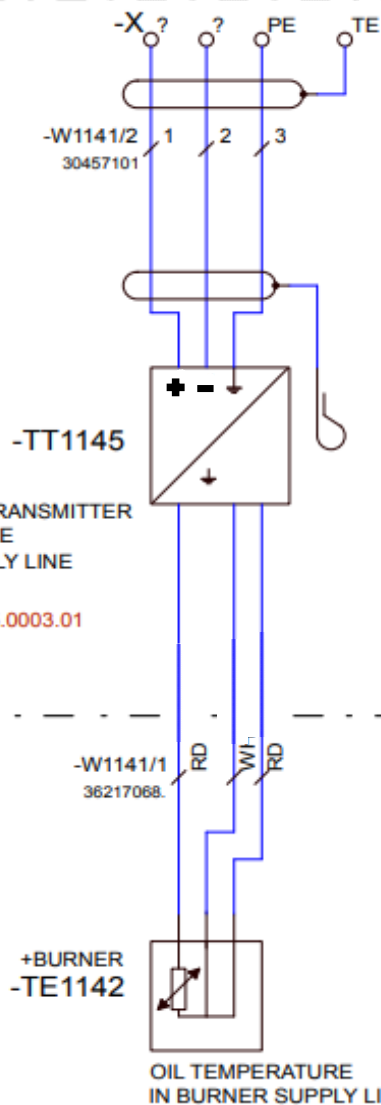

New

